




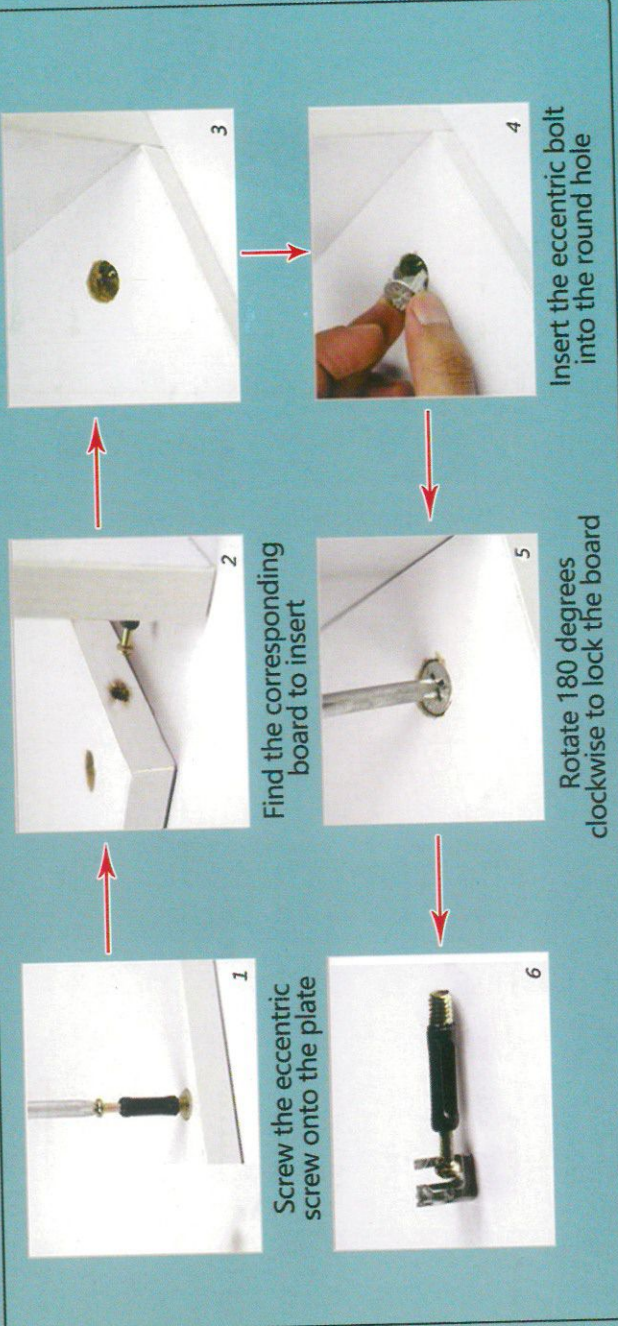


BC-04

Installation diagram of bedside table single draw

				
Eccentric screw A*8	Eccentric bolt B*8	3.5CM self tapping screw C*12	Metal pin D*2	Little nail E*10

Eccentric installation principle



1 Screw the eccentric screw onto the plate

2 Find the corresponding board to insert


3 Insert the eccentric bolt into the round hole

4 Rotate 180 degrees clockwise to lock the board

5 Rotate 180 degrees clockwise to lock the board

6 Rotate 180 degrees clockwise to lock the board

Installation of drawer section

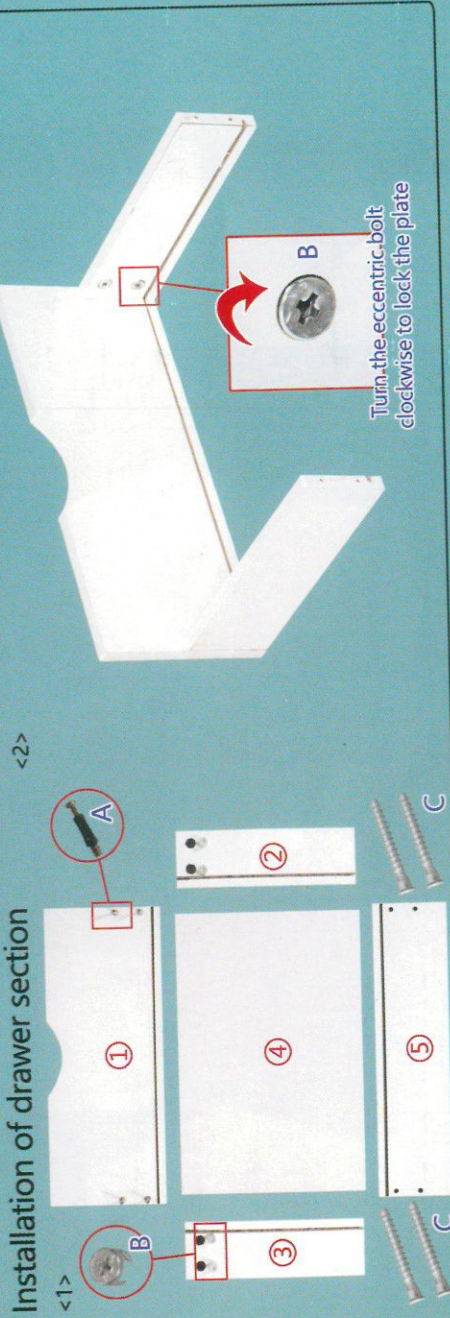


<1> Install the eccentric bolt (B) and eccentric screw (A)

<2> Install the metal pin (D) and little nail (E)

<3> Install the 3.5CM self tapping screw (C)

Turn the eccentric bolt clockwise to lock the plate


<3> Align the card slot and insert it

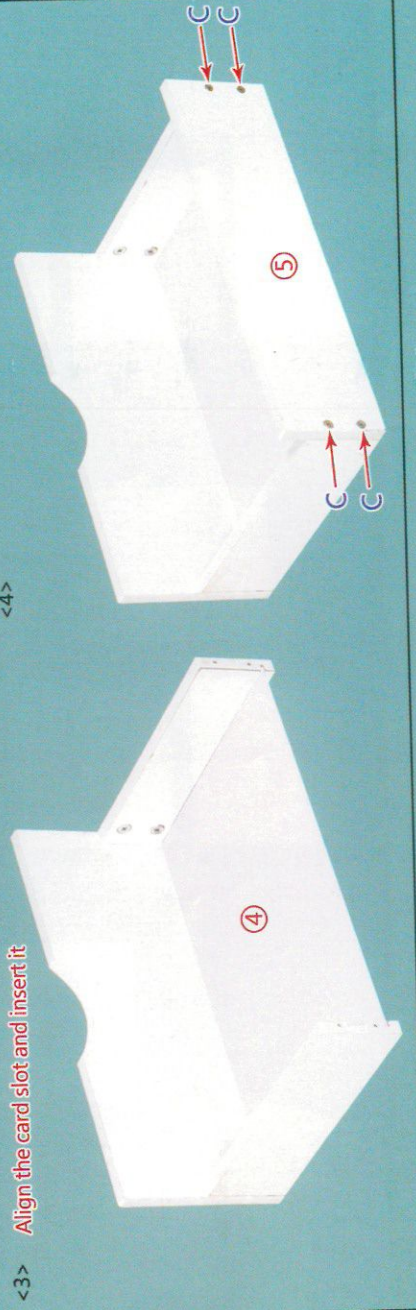


<3> Align the card slot and insert it

<4> Final assembly of the drawer section


Plate part

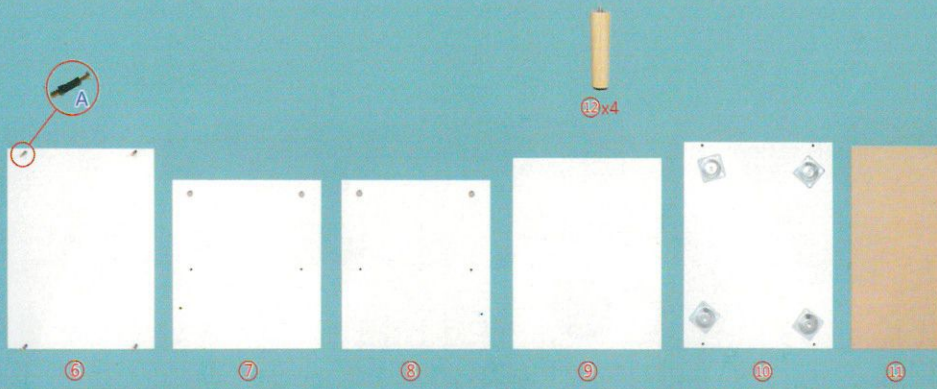

<4>

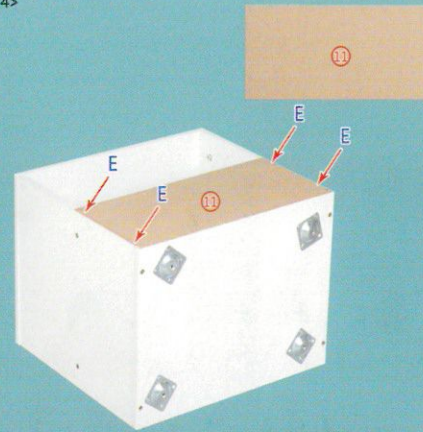


<5>

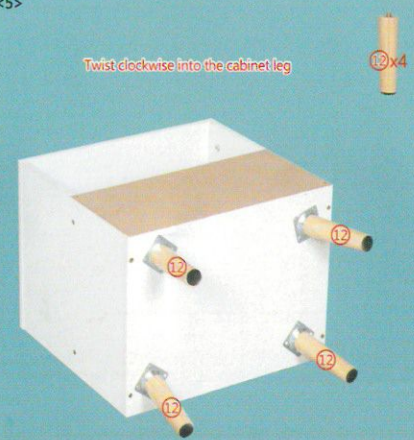


Step 1: Installation of overall parts

<1>

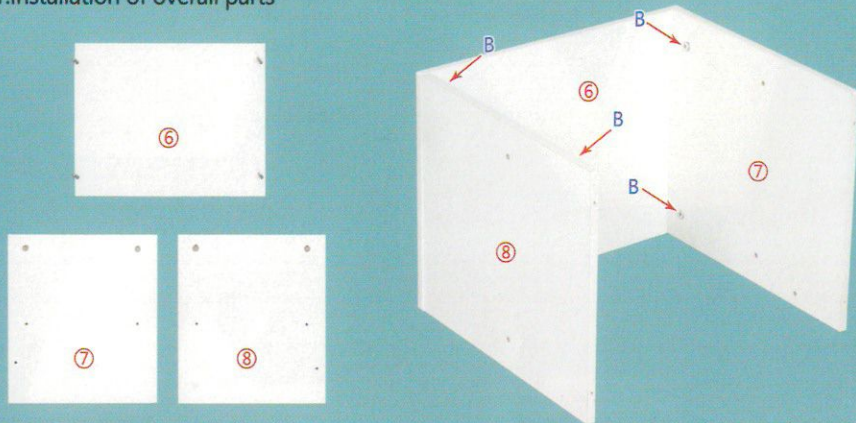


<6>

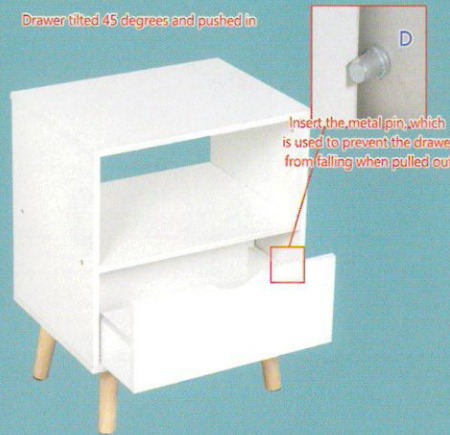

<7>



<2>

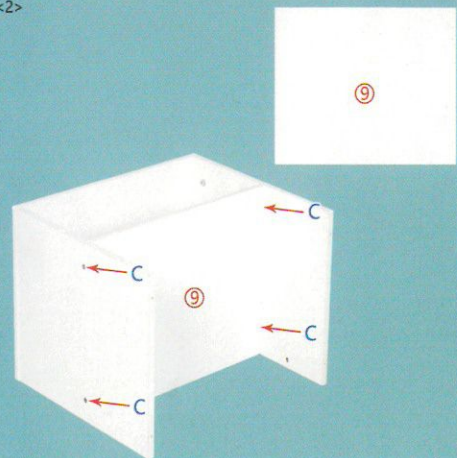

<3>

